

PABCO® *Evolution Ridge Vent*



Back View



Front View

FEATURES

- Visible from one side only
- Quick and easy installation saves time and money
- One size fits all width hip and ridge shingles
- No ridge cap trimming required
- One slot to cut
- No vent trimming needed
- Meets or exceeds ventilation requirements
- 9 square inches of net free area per linear foot
- 12 pieces per carton (covers 48 linear feet)
- 24 cartons per pallet




PABCO® Roofing Products

Recommended by professionals.

INSTALLATION INSTRUCTIONS


- You must have a balanced ventilation system.
- Soffit intake net free area should equal PABCO® Evolution Ridge Vent net free area.
- When installing PABCO® Evolution Ridge Vents, all other vent openings (except soffits) should be closed off.
- The slot cut in the roof ridge should not be cut any closer than twelve (12) inches of any junction point such as intersecting roof ridge, chimney, gable, or other obstruction.
- Slot should only be cut on one side of the ridge.
- PABCO® Evolution Ridge Vents are for pitches of 3/12 through 16/12.
- Do not over nail.

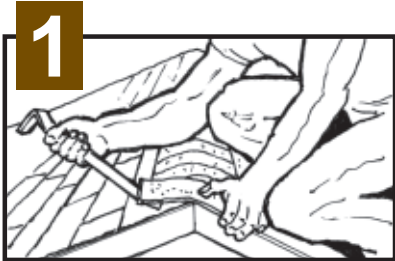

Remove ridge cap shingles from the entire length of the ridge.
Note 1: Delete Step 1 for new construction.




Snap chalk line on rear side of the ridge (or which ever side of the ridge that aesthetic considerations dictate) and no more than .750 (3/4) of an inch from the peak.

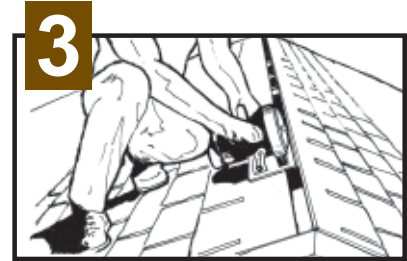


Cut along chalk line and remove the cut pieces of the roof sheathing.
NOTE: Slot should not be cut any closer than within twelve (12) inches of gable end, hip or intersecting ridge.




Apply the vent so that the hinge is centered along the peak allowing the flange to rest on the roof deck opposite the slot opening. Secure roof vent body using 3" galvanized roofing nails and nailing through (2) provided pilot holes on vent body. Nailing flange is optional unless vent is being cut.

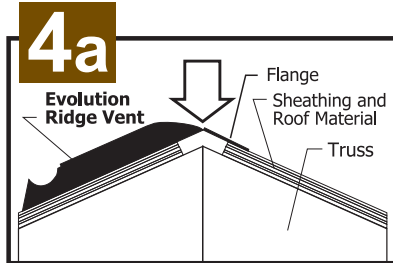


Center Hinge of Flange over center of peak.
(as shown by arrow)

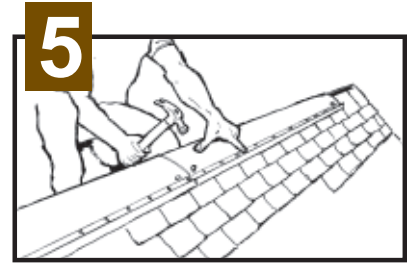


Join vents end-to-end by interlocking alignment tabs. Nail each additional section in the same manner until desired length is covered.

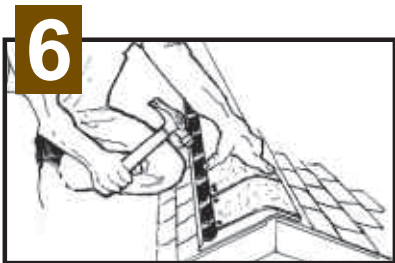

Install new ridge cap by aligning the edge of the shingle with the edge of the vent cap. Secure the ridge cap by nailing the ridge cap through the vent body into the roof decking on one side and by nailing directly into the existing shingle/deck stratum on the other.

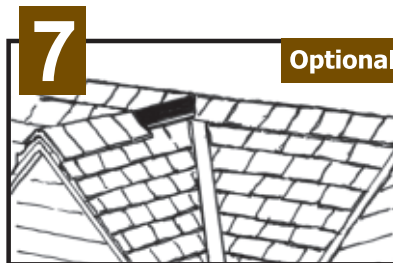

Ridge-to-ridge application requires a mitre cut to maintain continuous ridgeline appearance. Nailing the flange is required when making a straight or mitre cut.

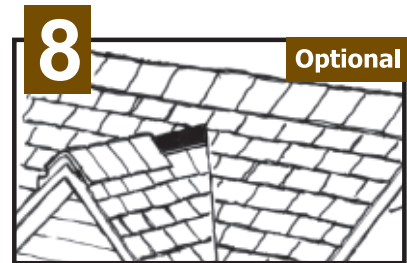

Ridge-to-roof application requires a mitre cut to maintain continuous ridgeline appearance. Nailing the flange is required when making a straight or mitre cut.



PABCO® Roofing Products

a division of PABCO building products, LLC

©2007 PABCO® Roofing Products. All trademarks ® are registered trademarks. Patent pending.

PR125 AL 5,000 11/01/07